

VIBRARANDOM SNAKECHASER

**TOTALLY SAFE AND ENVIRONMENTAL FRIENDLY METHOD TO KEEP
 SNAKES OUT OF THE PROTECTED AREA!**

Snakes have very poor eyesight and they cannot hear sonic waves transmitted by the air. To make up, they can sense vibrations transmit from the ground by their jowls as a signal of danger. Thus, using the vibrant sound could be a practical, and effective way to scare snakes away from a certain area.

The very convenient and newly developed electronic VIBRARANDOM SNAKECHASER is powered on a set of 4 pcs. D size alkaline battery. Just insert 4 pcs. D size (1.5V) alkaline battery and bury the VIBRARANDOM SNAKECHASER at an angle around 30 degree into the ground. Be sure to leave 1/5 portion of the aluminum shaft on the ground. The VIBRARANDOM SNAKECHASER will generate unique and random vibrations plus strikes travelling far underground. For snakes, the vibrations and strikes are the signals of danger. This could cause snakes be aware of the danger and frighten them away. The protection range can be up to 300 square meters.

The unique hibernated circuitry design and random vibration generation allow the battery lifespan at 12 months (might be varied due to different brand of battery) for day and night, 24 hours constant operation.

SPECIFICATIONS:

- Dimensions: 41.5cm (L) x 6.5cm (Diameter)
- Weight: 370 grams w/o battery
- Power Supply: 1.5V (4 x D cell batteries)
- Duration of Interval: 15 – 75 seconds randomly
- Duration of Sound Vibration: 1.5 – 3.5 seconds randomly
- Effective Coverage: within 300 sq. Meters unobstructed

PERATION INSTRUCTIONS:

1. To open, unscrew the top cover anti-clockwise.
2. Remove battery box and insert 4 x 1.5V (D size) alkaline battery as indicated $\square + \square$ and $\square -$ polarities. If battery installation is correct, you should hear the first vibration sound in 20 seconds.
3. After ensuring battery installation is correct, replace battery box and tighten the top cover to ensure 100% maximum weather protection.
4. Insert VIBRARANDOM SNAKECHASER into the ground at the angle around 30 degree and leave 1/5 portion of the shaft on the ground.
5. Your VIBRARANDOM SNAKECHASER will work Day and Night in your garden and yard.

EXPLODED VIEW

